 


SM005-10#说明书 风琴折后上下对折 成品尺寸: 105X142.5MM 双面印刷-彩色印刷 展开尺寸: 525X285MM

封面



Wiring diagram

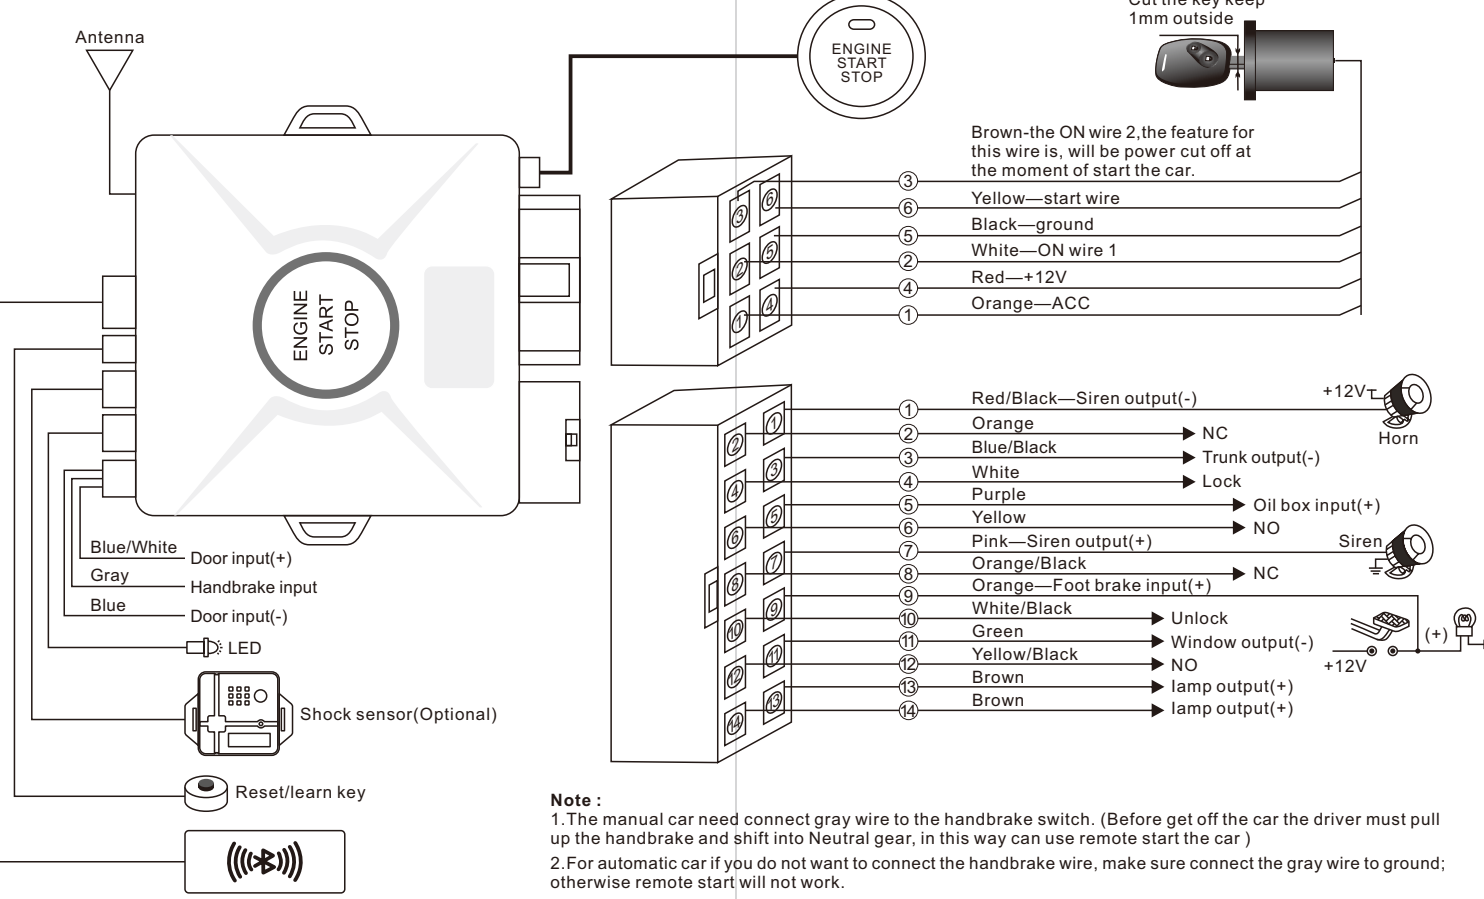

Note:
1. The manual car need connect gray wire to the handbrake switch. (Before get off the car the driver must pull up the handbrake and shift into Neutral gear, in this way can use remote start the car)
2. For automatic car if you do not want to connect the handbrake wire, make sure connect the gray wire to ground; otherwise remote start will not work.

Functional Description


- 1.LOCK**
Press once. The direction lights flash once, the siren will sound once, and the central locking system will lock all doors automatically. The LED indicator light will start flashing. (Power window output 25 seconds)
- 2.UNLOCK**
Press once. The direction lights flash twice, the siren will sound twice, and the central locking system will unlock all doors automatically. The LED indicator light will stop flashing.
- 3.TRUNK RELEASE**
Press and hold the for 3s, the trunk will open simultaneously.
- 4.CAR LOCATING**
Press once. The direction lights flash 5 times, the siren will sound 5 times to indicate where the car is. (the siren will not sound in silent mode).
- 5.SILENT MODE SWITCHING**
Press and hold the and 2s. The siren will sound once, then enter the audible anti-theft mode. If the siren sounds twice, then enter silent anti-theft mode (audible anti-theft mode is default. If need to change the mode, simply repeat the operation.)
- 6.AUTO CENTRAL LOCK**
When the vehicle is in motion, pressing the foot brake once will automatically lock the central locking system. After the ignition is turned off, the central locking system will automatically unlock. While driving, pressing the or remote button will automatically lock or unlock the central locking system accordingly. (If someone gets out of the car and closes the door while driving, pressing the foot brake will automatically re-lock the central locking system.)
- 7.AUTO ARMING MODE**
If the system is unintentionally disarmed and no door is opened within 40s, the system will automatically back to arming mode and lock the doors.
- 8.SIREN VERIFICATION**
If the vehicle is hit or a door is opened, the direction lights will flash, and the siren will sound continuously for 25s.

9.REMOTE START:



Press the once, then press and hold it for 3s within 5s to remotely start the vehicle. While in remote start mode, pressing and holding the 3s will remotely turn off the engine. If the remote is not used during this period, the vehicle will automatically turn off after 20 minutes after remote start.

10.LEARNING CODE METHOD:


- 1) In the locked state, pressing and hold the push start button, then press the learning code button on the main unit. The push start button light ring will flash, indicating entry into learning code mode. Short press the on the first remote control, the siren will sound once, indicating successful learning of the first remote control. Then short press the unlock button on the second remote control, the siren will sound twice, indicating successful learning of the second remote control. (The system only allows two remote controls to be paired.)
- 2) When the original car already has a paired remote control in the locked state, pressing the hold the push start button, and then press the on the existing remote control once. The push start button light ring will flash, indicating entry into learning code mode. Press the on the existing remote control once, the siren will sound once. Then press the on the new remote control once, the siren will sound twice, indicating successful learning of the code.
- 3) In the locked state, pressing and hold the learning code button, then siren will sound once, the direction lights flash once, indicating entry into learning code mode. Short press the on the first remote control, the siren will sound once, indicating successful learning of the first remote control. Short press the on the second remote control, the siren will sound twice, indicating successful learning of the second remote control.

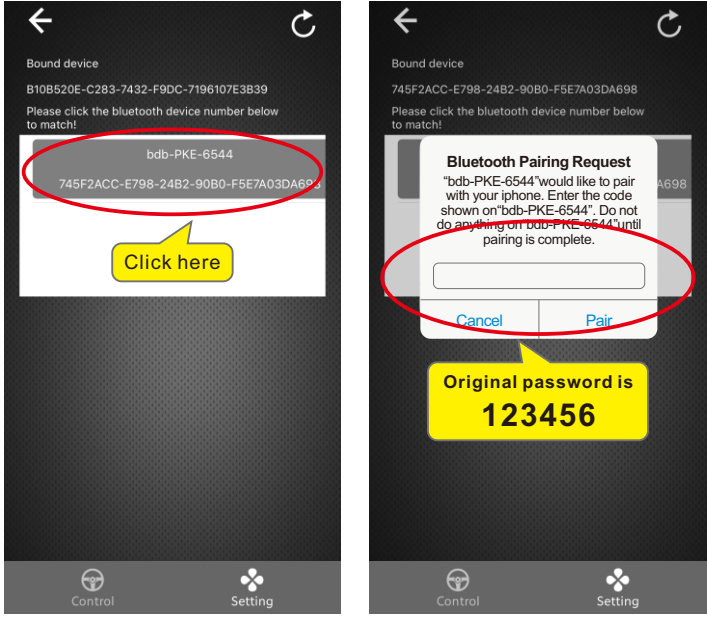

Note: To prevent your vehicle from being stolen, change your initial password immediately.

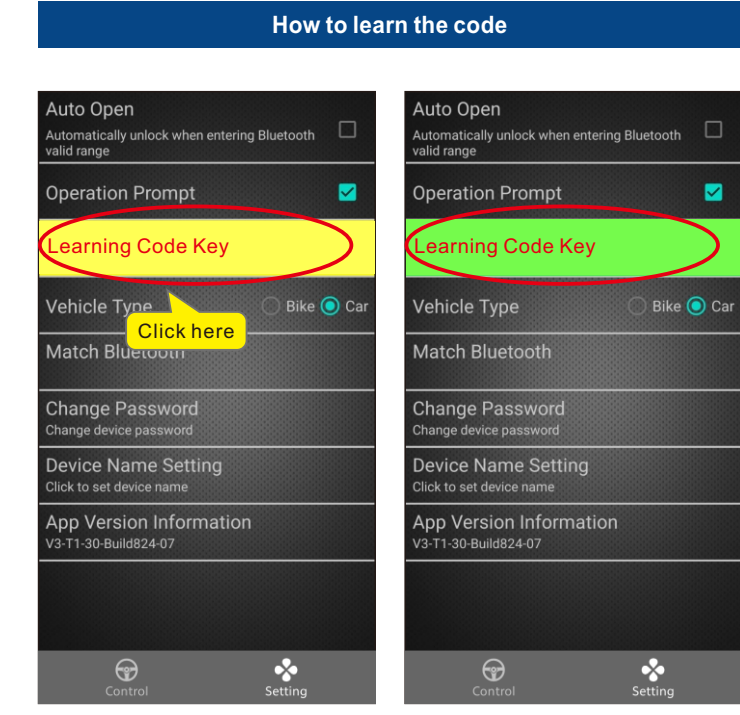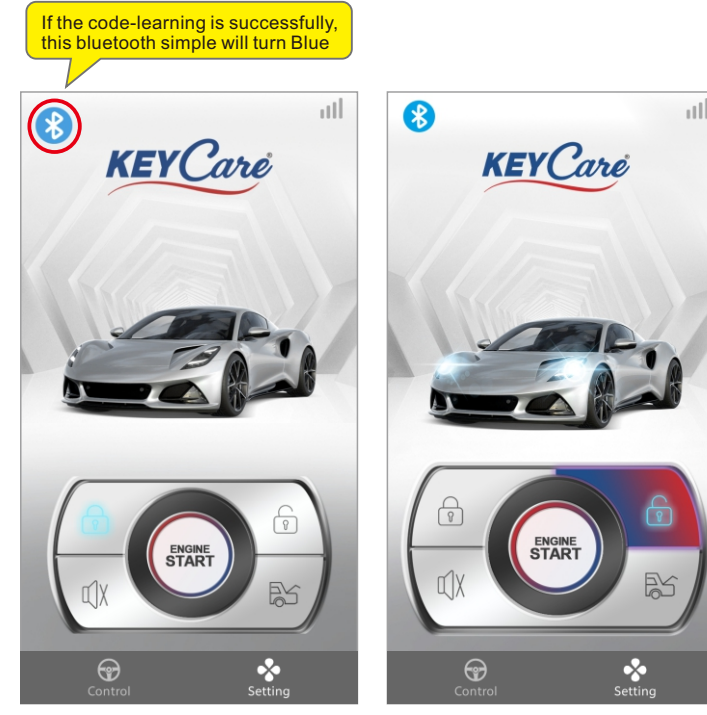

- 1.Lock: arm, press the once on the APP, the horn will chip once and direction light will flash once
- 2.Unlock: disarm, press the once on the APP, direction light will flash twice
- 3.Car Finading: press the once on the APP
- 4. Mute alarm.

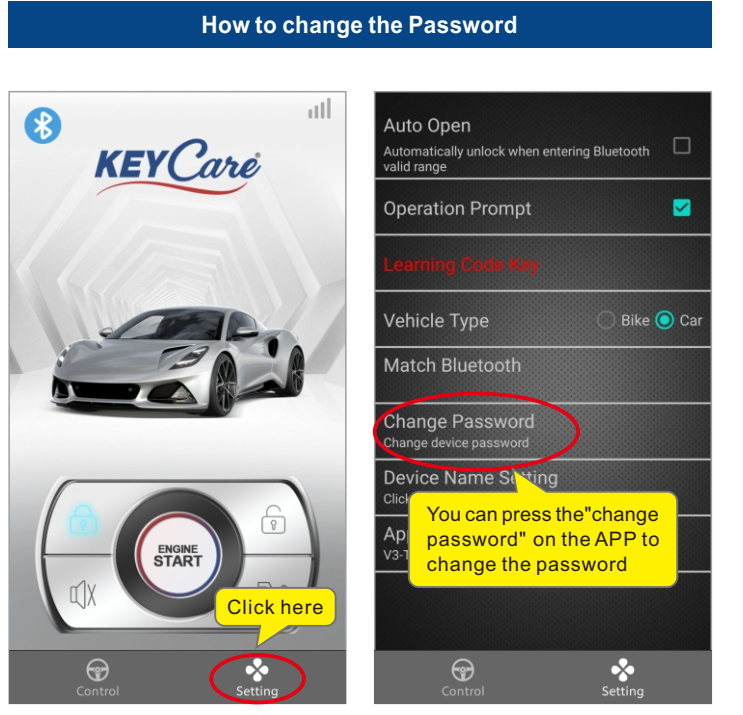


封底





- 11.PUSH START BUTTON:**
1) Do not step on the footbrake, press push button the ACC-ON-OFF-ACC cycle switching.
2) In the not starting state, step on the footbrake and then press the push start button will start the engine.
3) In the starting state, step on the footbrake and then press push start button will turn off the engine.
4) In the OFF state, pressing and hold the push start button for 3s to start the engine.
5) In the starting state, pressing and hold the push start button for 3s to turn off the engine.
- 12.EMERGENCY DISARMING STATUS:**
Press and hold the learning code button for more than 10s to enter temporary disarming mode.
The vehicle can be started within 30s, and the push button function will automatically turn off 30s after the engine is turned off.

Bluetooth application operation

Scan the QR Code with your cell phone:

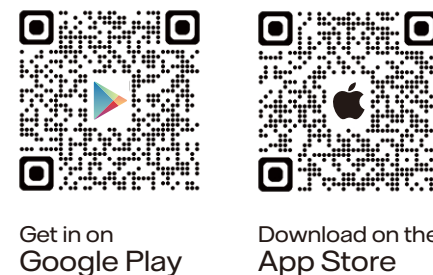

After the download is complete, the mobile desktop icon is displayed as shown below.

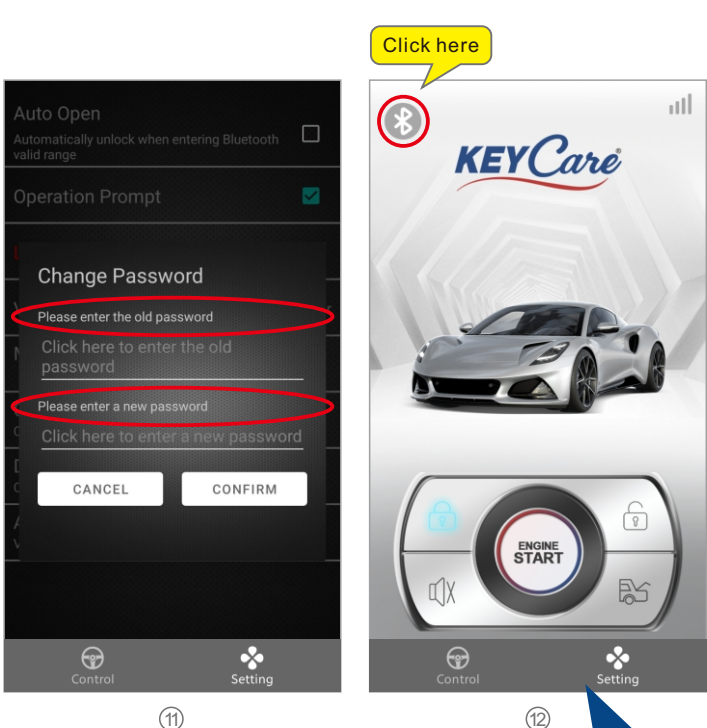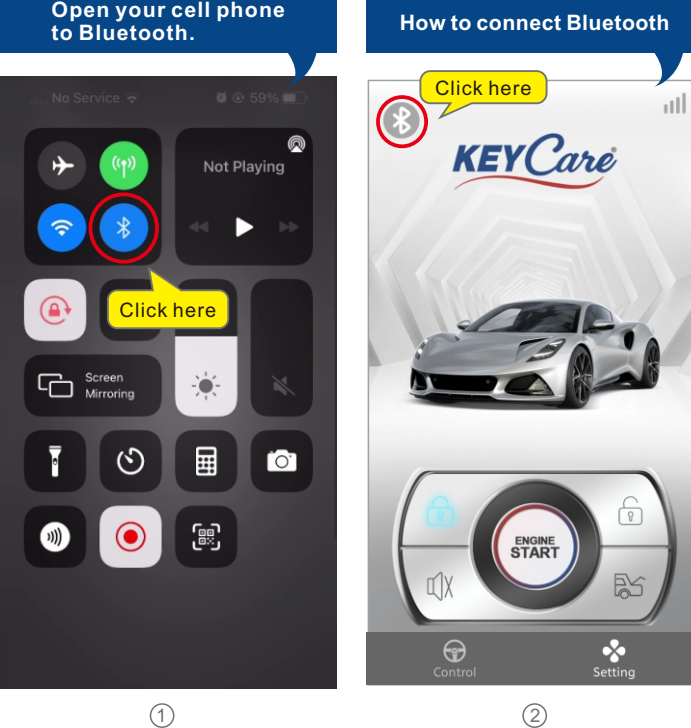

After change or reset the password need to connect the bluetooth again

